


Fit D304 on underside
between R312 and P301

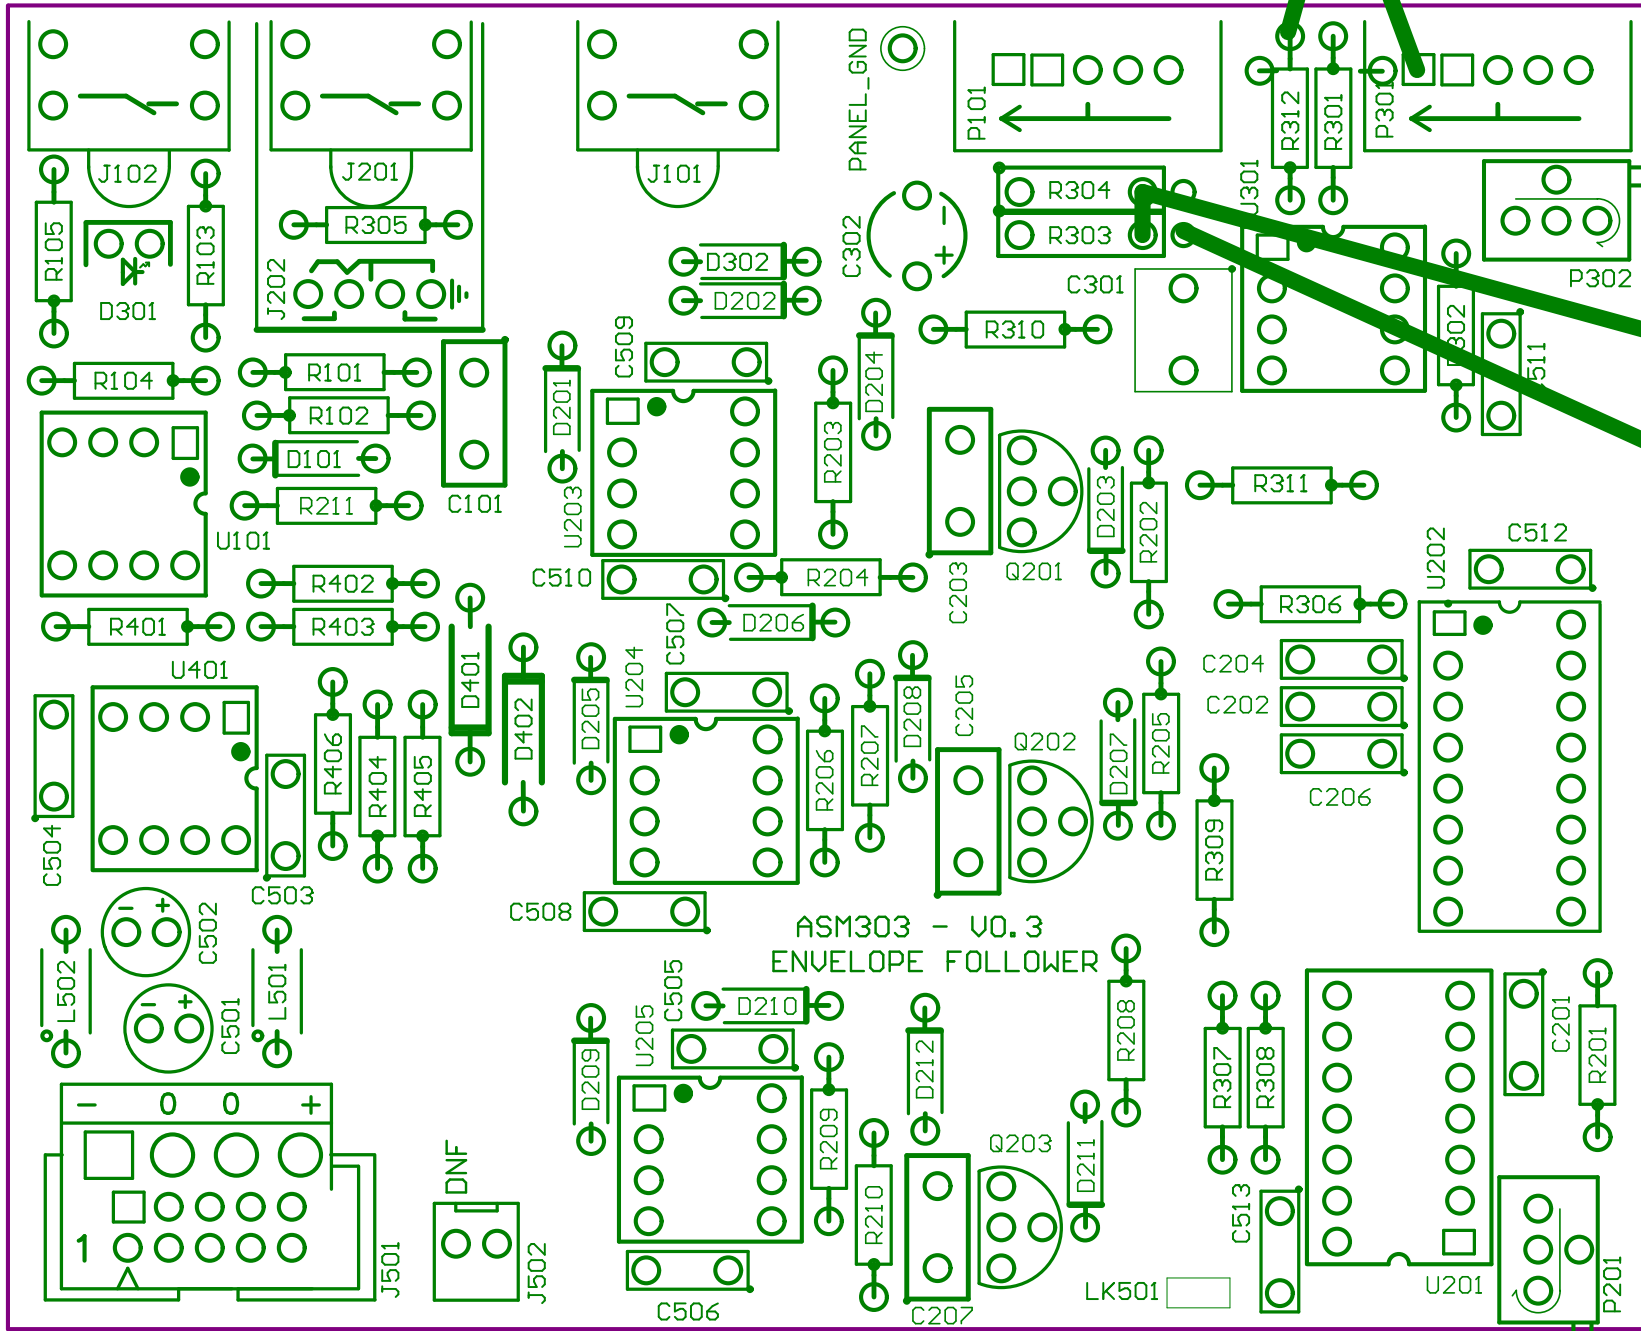

Stand D303 upright in pad R303.
Join R303/R304 to free end of D303