




J201

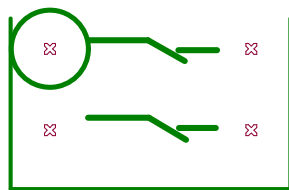

J401

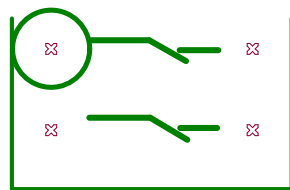

J301

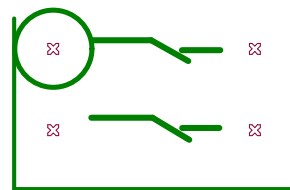


J101



CARRIER V1.2

S101

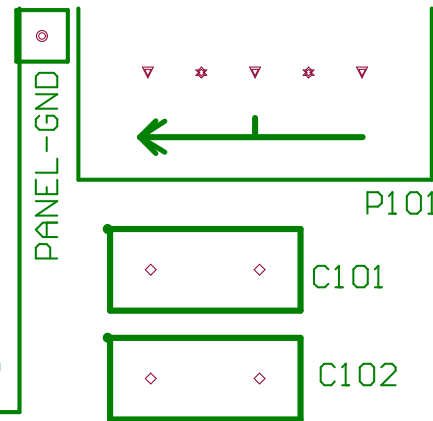


PANEL-GND


P101

C101


C102

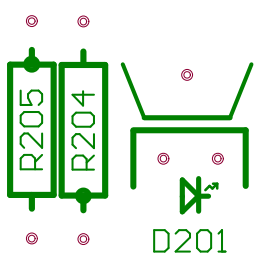


D201

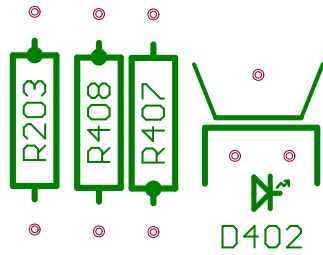

D402

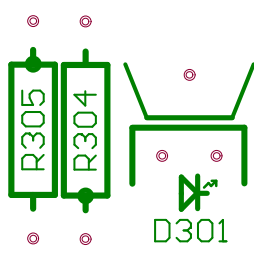

D301

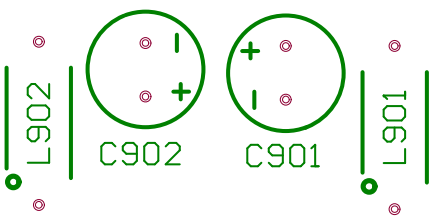

C902

C901



Q201



Q301



R202

R201




R302

R301



R405

R404



Q401



R403


D401



R402



R401

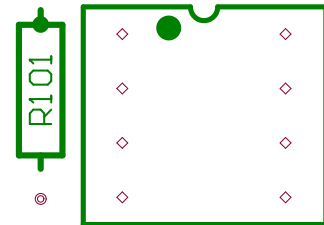


U101



R101



C103

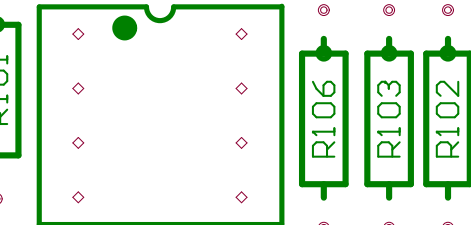

R106

R103


R102



R104



C104

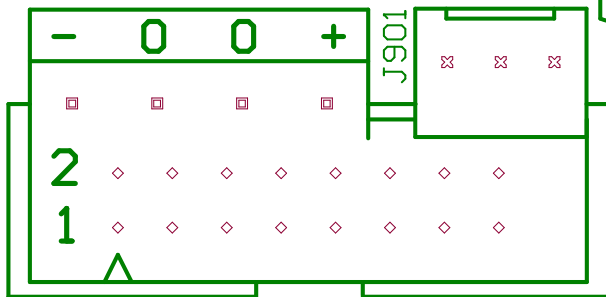

J901

CGS762 SLOPE DETECTOR V1.1
ELBY DESIGNS - KEN STONE

